

THE FAILSAFE BRAKE IS SPRING LOADED TO APPLY THE BRAKE AND HYDRAULIC PRESSURE IS REQUIRED TO RELEASE OR "HOLD OFF" THE BRAKE. NORMAL OPERATION IS TO HAVE THE BRAKE PRESSURIZED RUNNING. ANY FUNCTION WHICH REDUCES THE HYDRAULIC SYSTEM PRESSURE BELOW THE RELEASE PRESSURE OF THE BRAKE WILL CAUSE THE BRAKE TO BE APPLIED.

INSTALLATION INFORMATION:

1. REMOVE NUT AND WASHER FROM THE SHAFT.
2. INSTALL YOKE, WASHER AND NUT. TORQUE NUT TO 275-325 FT. LB.
3. MOVE BRAKE INTO POSITION AND ALIGN MOUNTING BOLTHOLES AND INSERT FOUR BOLTS 16 mm OR FOUR 5/8 INCH THROUGH HOLES IN EACH MOUNTING FOOT. TORQUE THE BOLTS TO 160 FT.-LB. FOR GRADE 5, OR 230 FT.-LB. FOR GRADE 8 ALTERNATELY UNTIL SNUG.
4. SLIDE YOKE OVER SHAFT.
5. CONNECT VEHICLE DRIVELINE TO BRAKE YOKES.
6. CONNECT HYDRAULIC SUPPLY LINE TO POWER PLATE INLET

BRAKE DISASSEMBLY INFORMATION:

1. REMOVE BRAKE FROM MOUNTING POSITION AND REMOVE YOKES.
 2. POSITION BRAKE WITH POWER PLATE UP, THE SIDE WITH MOUNTING FEET
 3. REMOVE ASSEMBLY BOLTS ALTERNATELY KEEPING POWER PLATE PARALLEL TO THE HOUSING TO PREVENT DAMAGE TO BEARINGS. USE EXTREME CAUTION: SPRINGS CAN CAUSE POWER PLATE ASSEMBLY TO POP OFF HOUSING.
 4. AFTER THE ASSEMBLY BOLTS HAVE BEEN REMOVED, REMOVE POSER PLATE ASSEMBLY FROM BRAKE.
 5. REMOVE SHAFT AND DISC STACK FROM THE BRAKE. IF THE STACK IS TO BE SERVICED USE A SHOP PRESS. REMOVE THE BEARING CONES FROM SHAFT.
 6. REMOVE PRIMARY PLATE, SPRINGS AND SPRING RETAINER FROM HOUSING SPRING POCKET.
 7. REMOVE PISTON FROM POWER PLATE BY INTRODUCING LOW-PRESSURE AIR, 15 PSI, INTO HYDRAULIC INLET. MAKE SURE THE PISTON IS DIRECTED AWAY FROM THE OPERATOR. REMOVE O-RINGS FROM THE O.D. AND I.D. OF THE GROOVE OF THE PISTON.
- NOTE: IF THE BEARING AND/OR SEALS ARE REMOVED, BOTH MUST BE REPLACED. SEAL CAN BE REMOVED BY PRYING IT OUT WITH AN APPROPRIATE TOOL. CARE MUST BE TAKEN NOT TO DAMAGE THE BORE.

ASSEMBLY INFORMATION:

IMPORTANT: THERE MAY BE MORE PARTS IN A SERVICE KIT THAN YOUR BRAKE REQUIRES. CHECK THE PARTS LIST CAREFULLY FOR THE EXACT QUANTITY. SPACE THE SPRINGS AS SHOWN ON THE SPRING ORIENTATION.

USE THE REVERSE OF THE DISASSEMBLY PROCEDURE WITH THE FOLLOWING NOTES AND ADDITIONS:

1. WORN AND DAMAGED O-RINGS MUST BE REPLACED PRIOR TO REASSEMBLY.
2. CYLINDER OF THE POWERPLATE, PISTON, AND O-RINGS MUST BE PRE-LUBED WITH SYSTEM HYDRAULIC FLUID PRIOR TO REASSEMBLY.
3. PISTON ASSEMBLY:
ASSEMBLE PISTON INTO POWER PLATE USING A SHOP PRESS. TAKE CARE NOT TO DAMAGE THE O-RING. VISUALLY ALIGN THE CENTER OF THE CUTOUTS IN THE PISTON WITH THE TORQUE PIN HOLES IN THE POWER PLATE.

CAUTION: THE DEPTH THE PISTON IS INSTALLED INTO THE POWER PLATE IS CRITICAL. THE SURFACE OF THE PISTON AT THE CUTOUTS MUST BE FLUSH TO 0.120 BELOW THE SURFACE OF THE POWER PLATE OR PISTON WILL COCK RESULTING IN A COMPLETE LOSS OF BRAKING.

4. BEARING ASSEMBLY:
USING A SHOP PRESS INSTALL ONE CONE ON THE SHAFT. BEARING MUST BE SEATED TIGHT AGAINST THE STOP. PRESS ONLY ON THE INNER RACE OF THE BEARING CONE, NOT ON THE ROLLERS. INSTALL THE STATOR AND ROTATING DISCS ON THE SHAFT. NOTE THE ORDER OF THE DISCS IN RELATIONSHIP TO THE ENDS OF THE SHAFT. PRESS THE OTHER CONE ONTO THE SHAFT OBSERVING THE PRECEDING CAUTIONS.
5. BRAKE ASSEMBLY:
INSTALL PARTS IN REVERSE ORDER OF DISASSEMBLY LEAVING THE SHAFT SEALS TO LAST. RELEASE THE BRAKE WITH 300 PSI AND MEASURE THE TORQUE TO ROTATE THE SHAFT. THE FREE ROLLING TORQUE OF THE BRAKE SHAFT IS AN INDICATION OF BEARING SEATING AND FIT THE ROLLING TORQUE SHOULD BE 20 IN.-LB. MAXIMUM. IF IT DOES NOT MEET SPECIFICATION, CHECK THAT THE BEARING ARE WELL SEATED
6. LIP SEAL ASSEMBLY:
AFTER THE BRAKE IS ASSEMBLED, INSTALL THE SHAFT SEALS WITH CAUTION NOT TO CUT THE SEAL LIPS ON THE SHAFT SPLINES. THE SEAL IS INSTALLED WITH TWIN LIPS FACIANG OUTWARDS, AWAY FROM THE BRAKE. THE SINGLE LIP WILL FACE INWARDS.

SERVICE KIT INFORMATION:

BEARING KIT: PK 1931 - INCLUDES SEALS, RETAINING RINGS, AND BEARINGS.

STACK KIT: PK 1504 - INCLUDES TORQUE PINS, PRIMARY, STATIONARY, AND ROTATING DISCS.



O-RING KIT: PK 1503- INCLUDES O-RINGS, BACKUP RINGS, AND INTERNAL GASKET.



BRAKE NUMBER 80695 PARTS LIST

ECO 25905 REV K

ITEM	PART	DESCRIPTION	QTY
1	80186	HOUSING	1
2	29558	PIN TORQUE	2
3	74863	RETAINER SPRING	1
4	36385	SPRING COMPRESSION	18
5	36384	SPRING COMPRESSION	18
6	86127	SHAFT SPLINED	1
7	90118	TAPER ROLLER BEARING (CONE)	2
8	90119	TAPER ROLLER BEARING (CUP)	2
9	74849	DISC PRIMARY	1
10	74858	DISC ROTATING	7
11	74857	DISC STATIONARY	7
12	74842	GASKET	1
13	79799	PLATE POWER	1
14	74843	O-RING	1
15	74846	PISTON	1
16	74847	O-RING	1
17	80992	SEAL OIL	2
18	74923	NUT	1
19	75418	WASHER (HARDEN)	1
20	75414	RING RETAINING	1
21	75676	SPACER	1
22	74539	BOLT HEX FLANGED (METRIC)	6
23	36673	PLUG PROTECTIVE	1
24	37176	VALVE PRESSURE RELIEF	1
25	35553	PLUG HEX HEAD	2
26	75970	CAUTION TAG	1

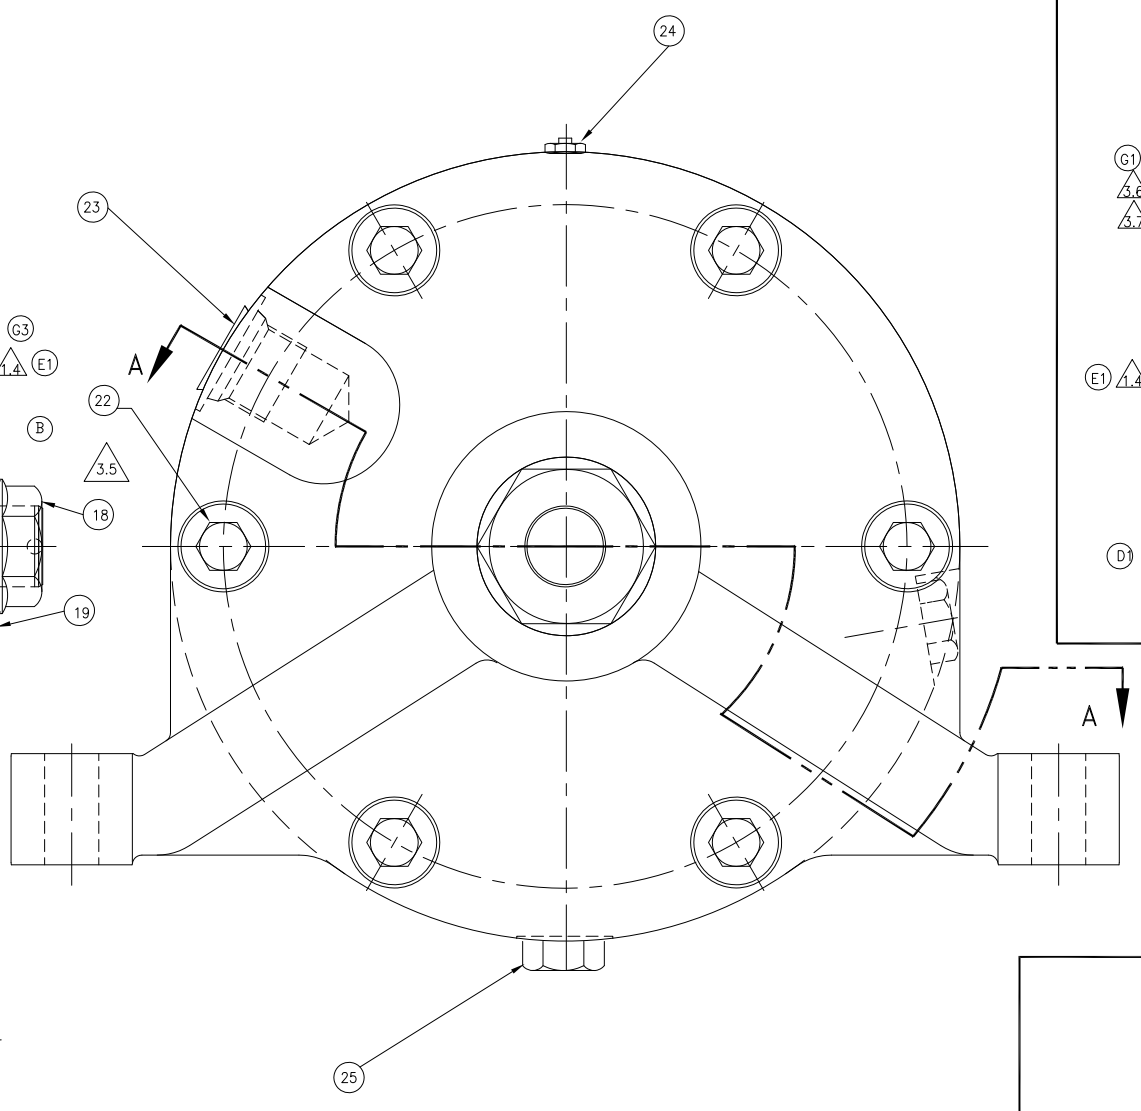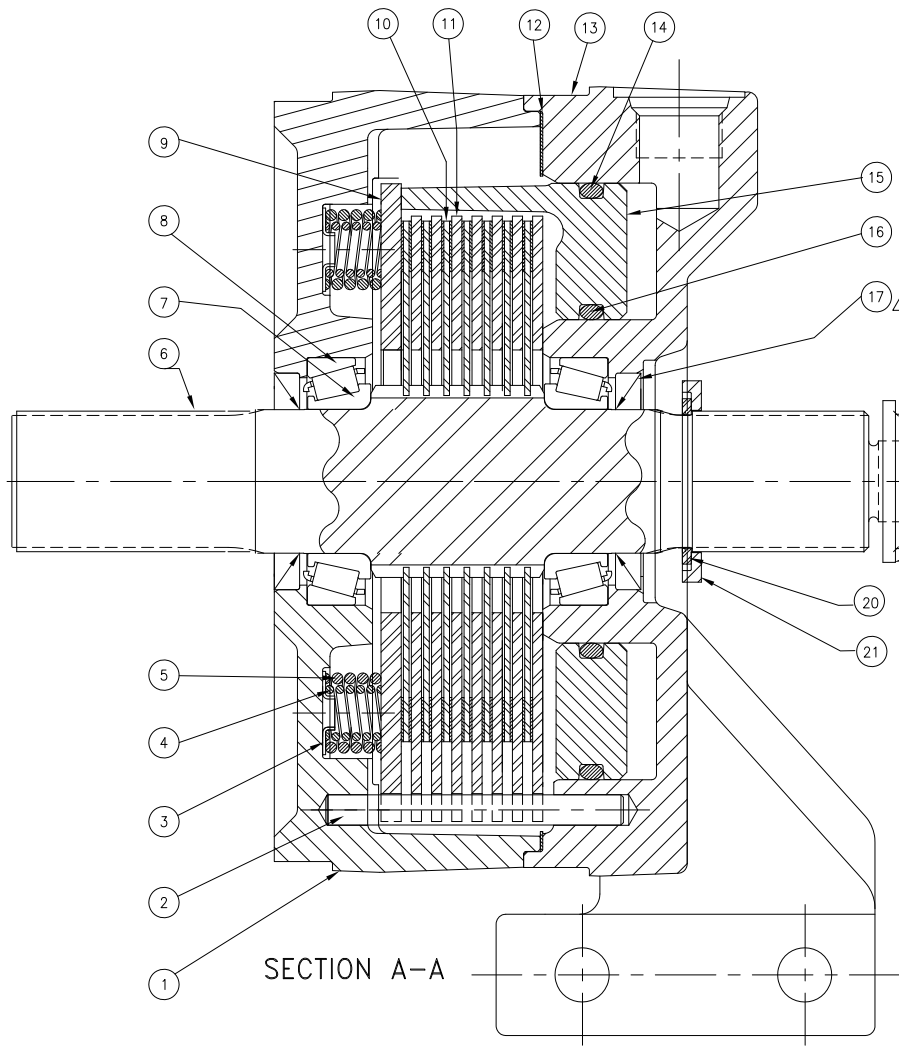

G1	C1
△ 3.6	(H1)
△ 3.7	(H2)
E1	△ 4.4
(C2)	
(D1)	△ 3.5

KA
KA
KA
JF
JF
IC

GENERAL ASSEMBLY VIEW

THIS DRAWING PROVIDES GENERAL GUIDELINES AND ASSEMBLY INFORMATION ON AUSCO MULTI-DISC BRAKES. CONFIGURATION OF BRAKES VARIES FROM MODEL TO MODEL. CONSULT YOUR BRAKES SERVICE NOTES, BILL OF MATERIAL, AND CUTAWAY VIEW FOR EXACT DETAILS.

